



SECTION C-C


(Type E-1 to be used, unless otherwise shown on plans)

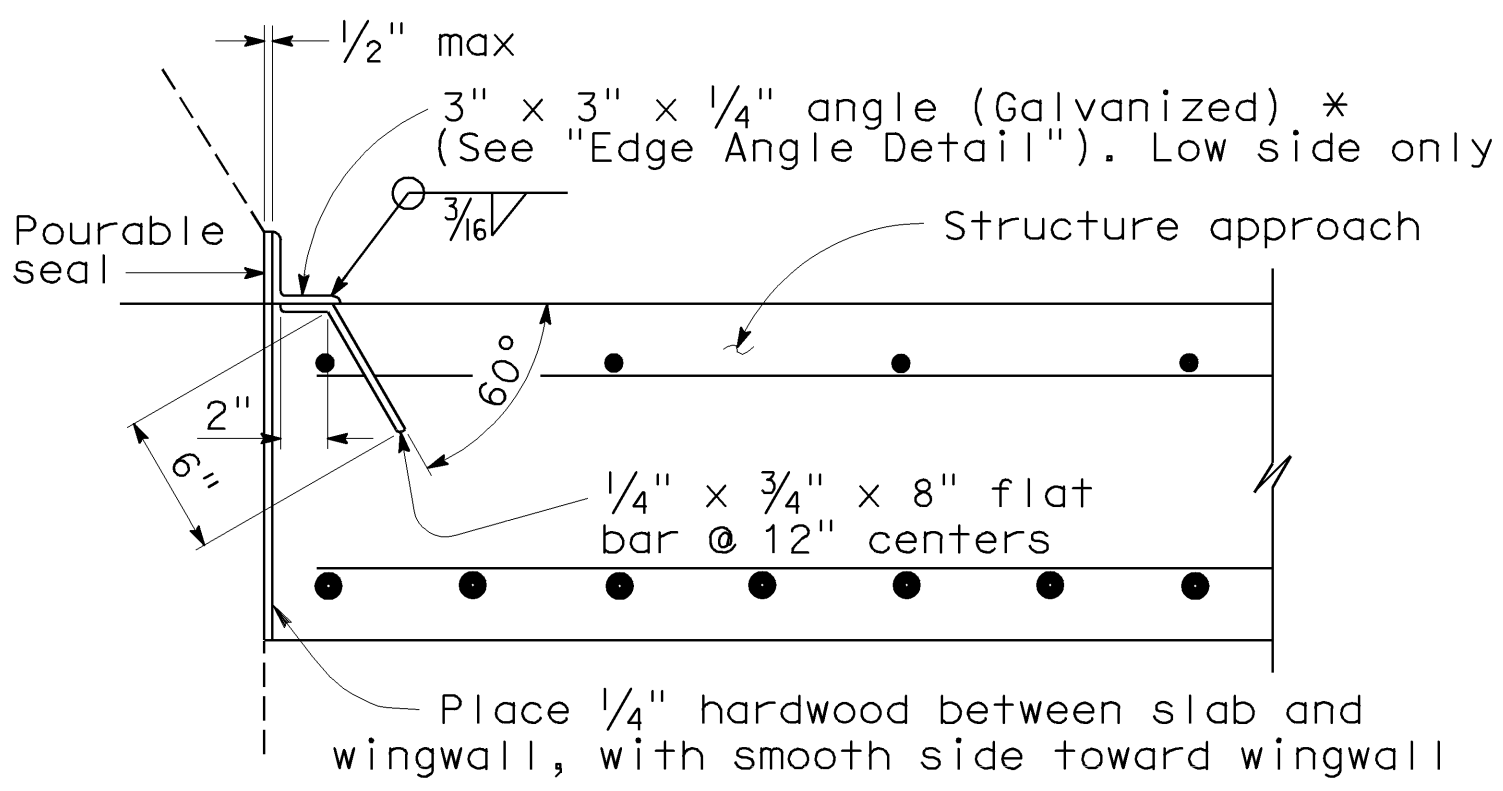

*(TO BE USED WITH TYPE 25 OR TYPE 27
CONCRETE BARRIER)

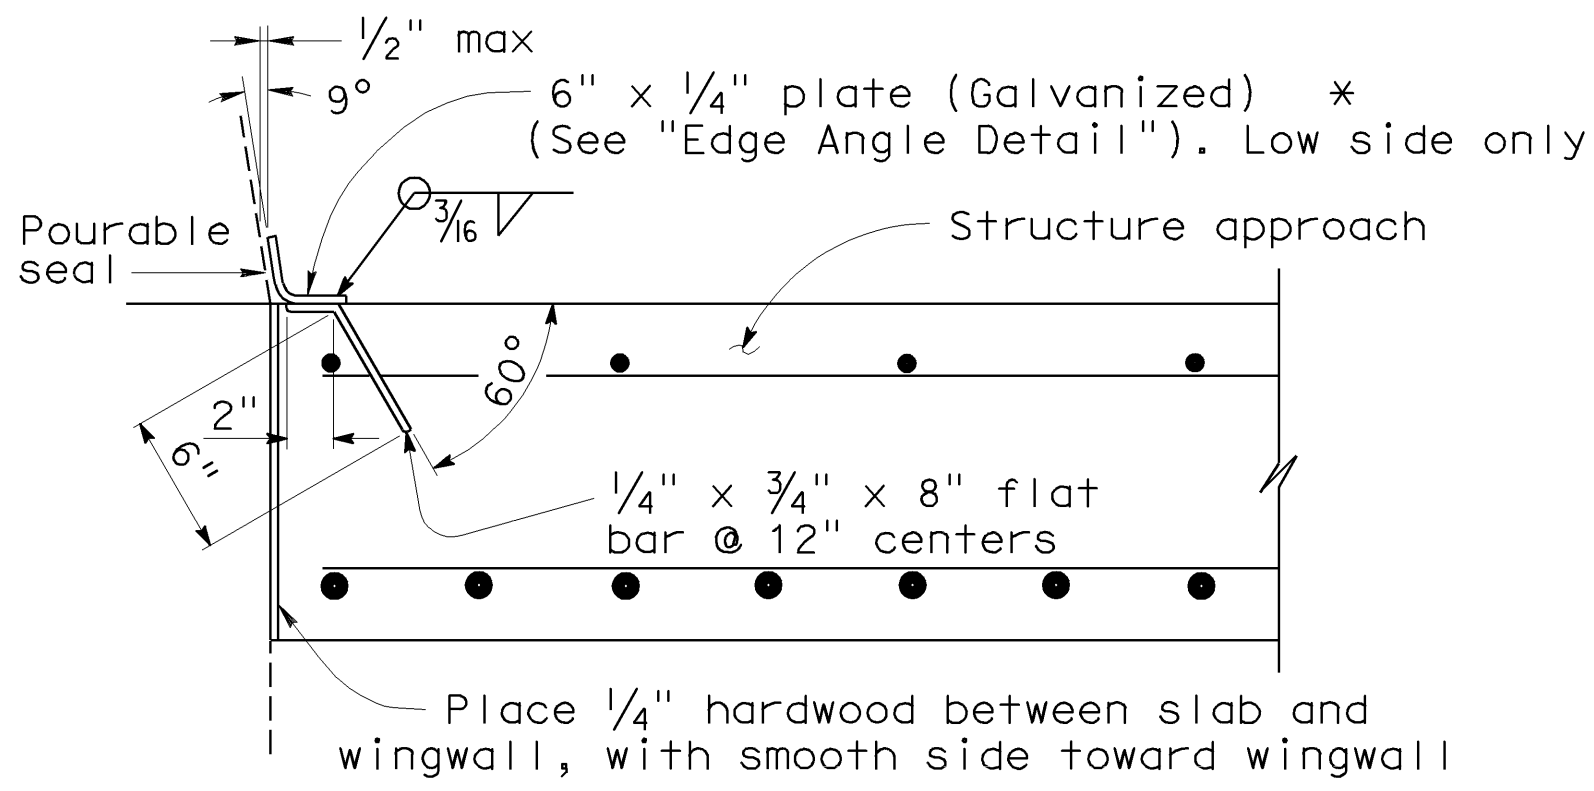


*(TO BE USED WITH TYPE 732 OR TYPE 736
CONCRETE BARRIER)

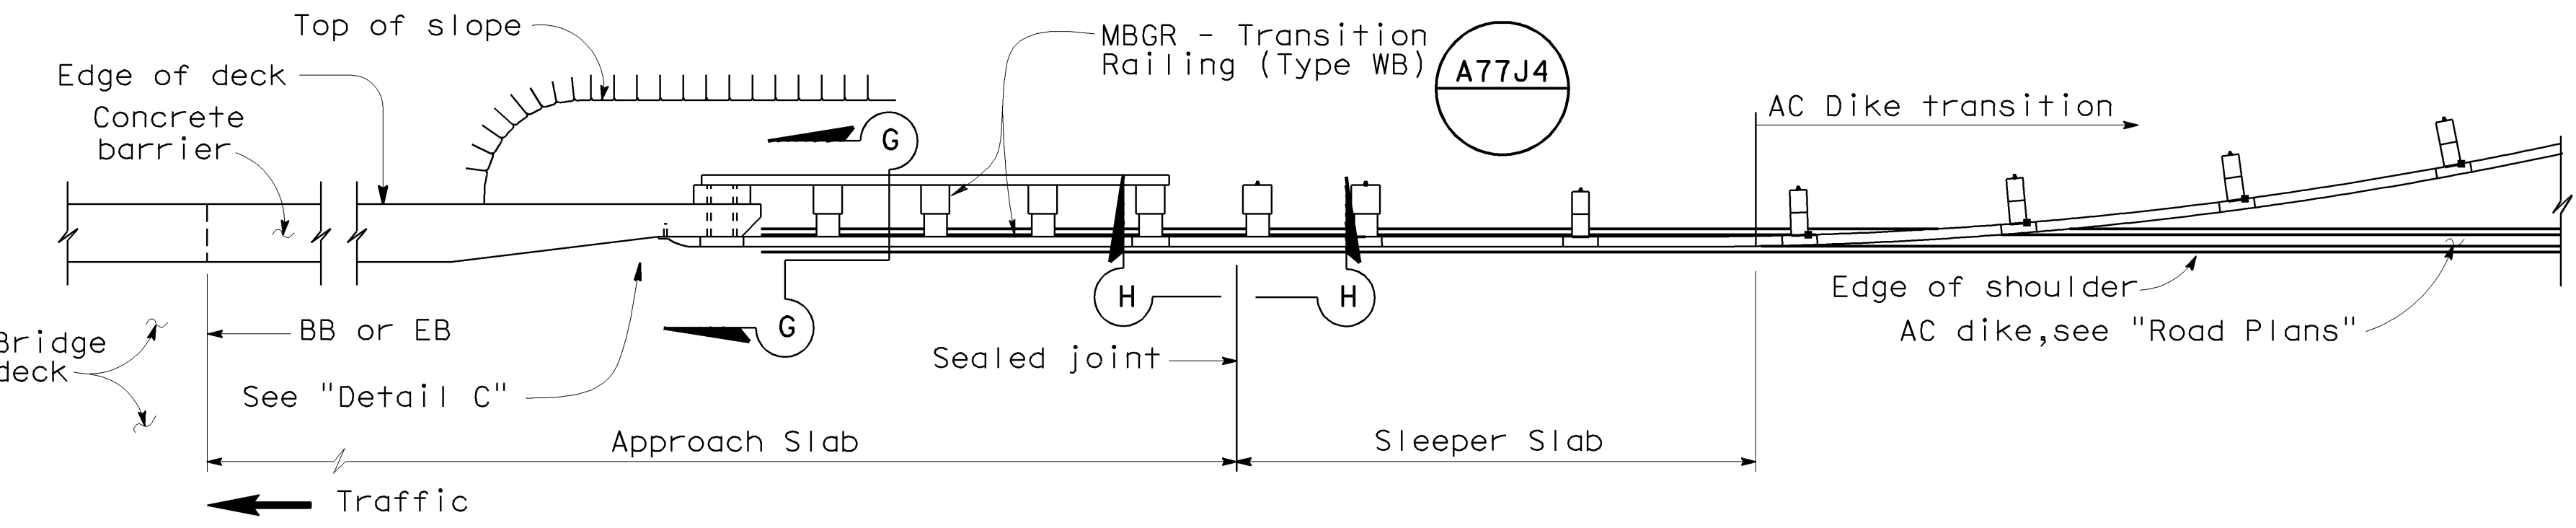

PLAN (SEE NOTE 1)

DETAIL B


1 1/2" = 1'-0"

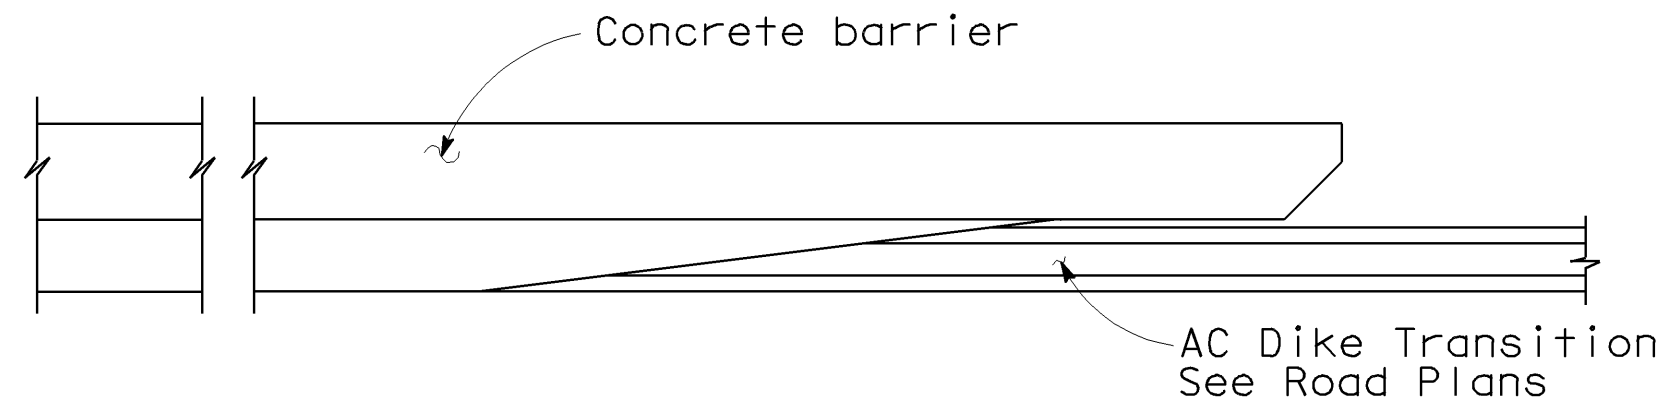

DETAIL C


1/2" = 1'-0"

GUARDRAIL AND DIKE DETAILS

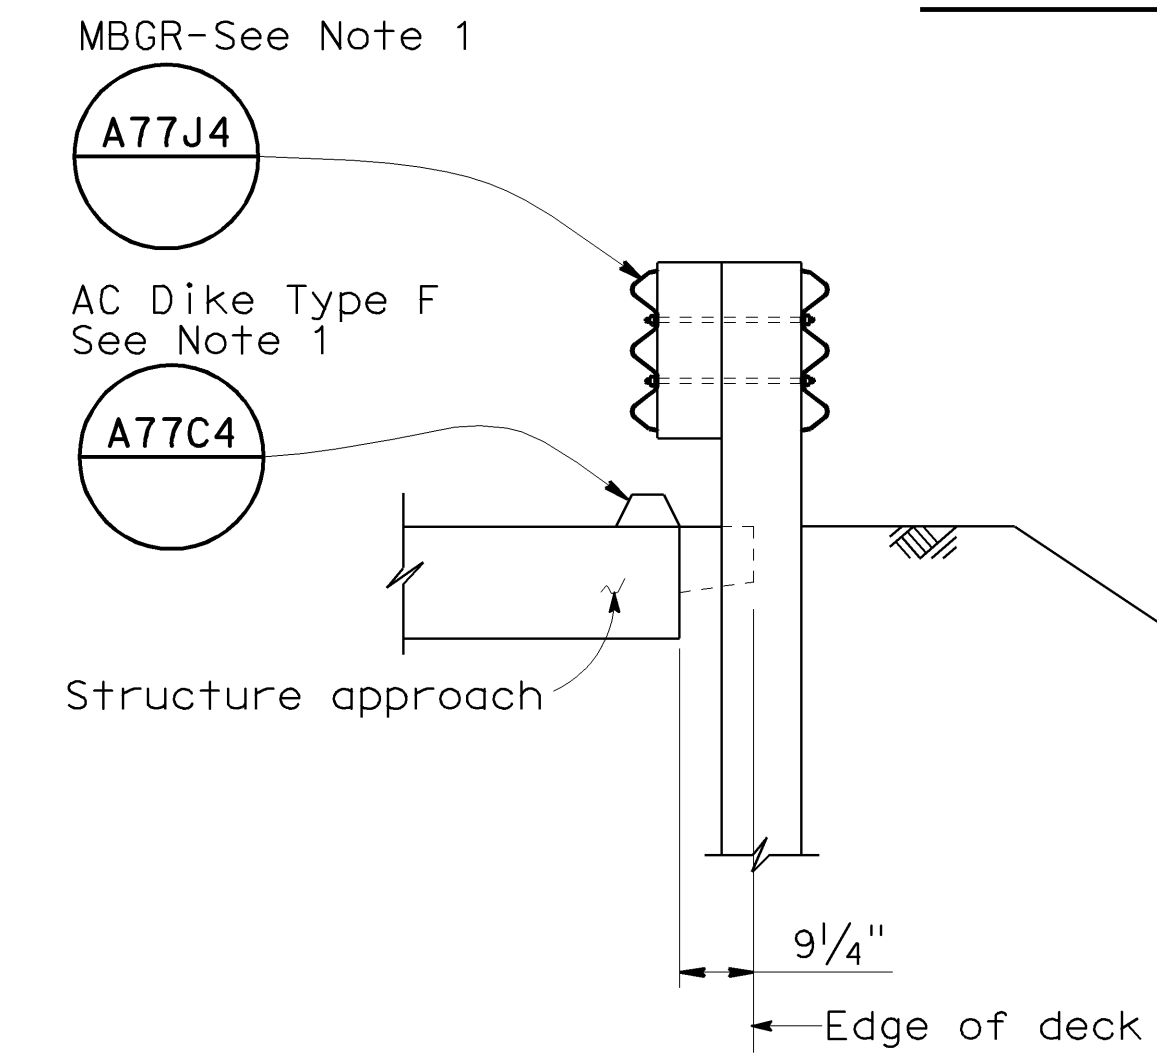


SECTION G-G

1/2" = 1'-0"

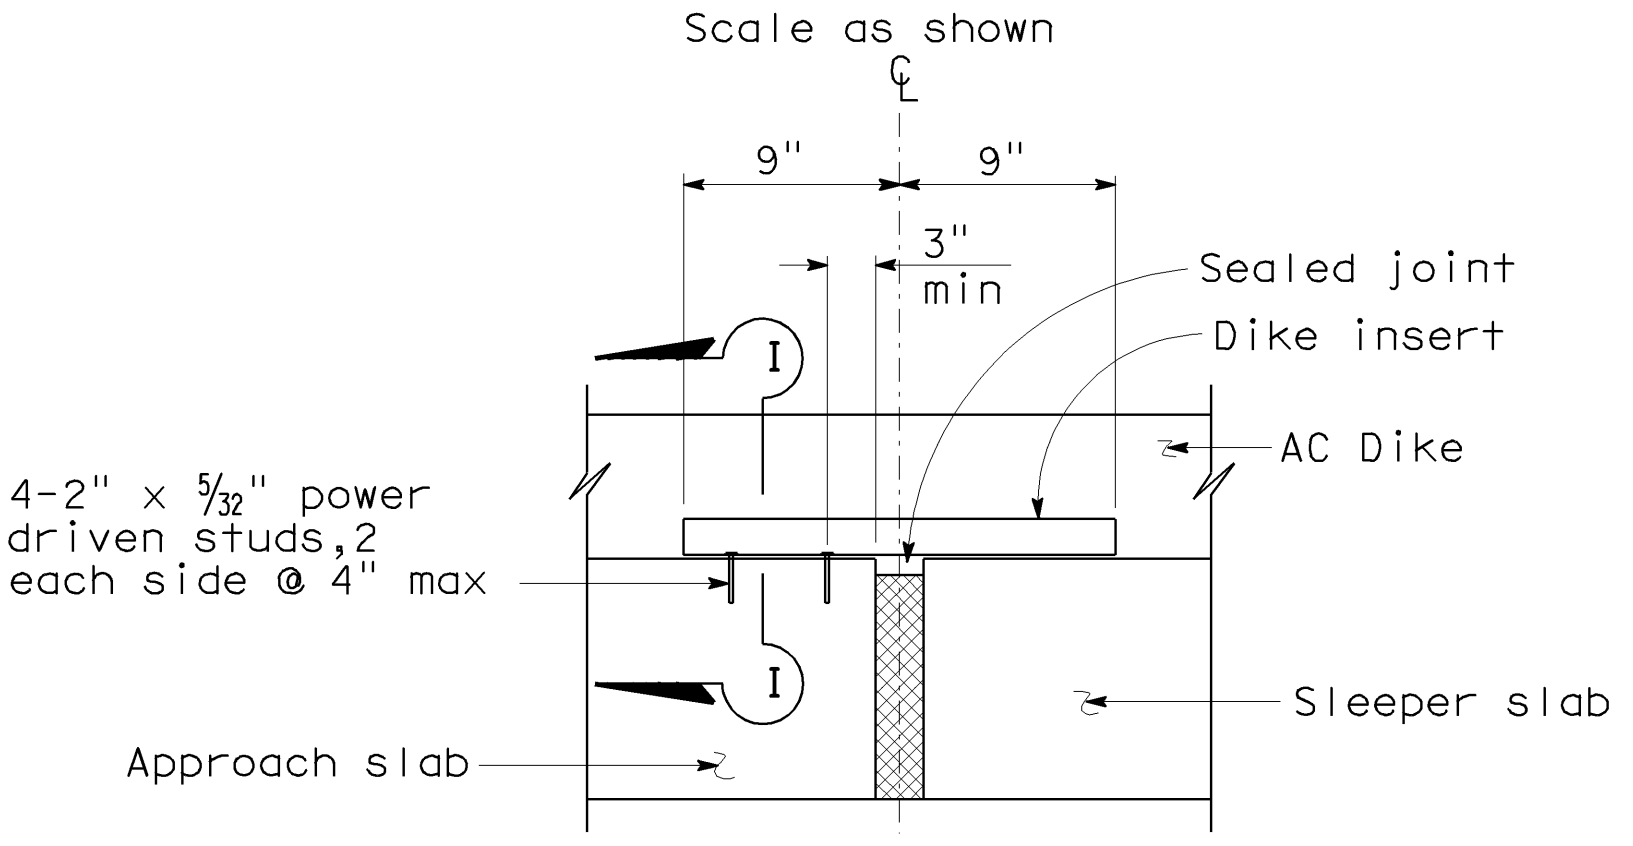

SECTION H-H

1 1/2" = 1'-0"

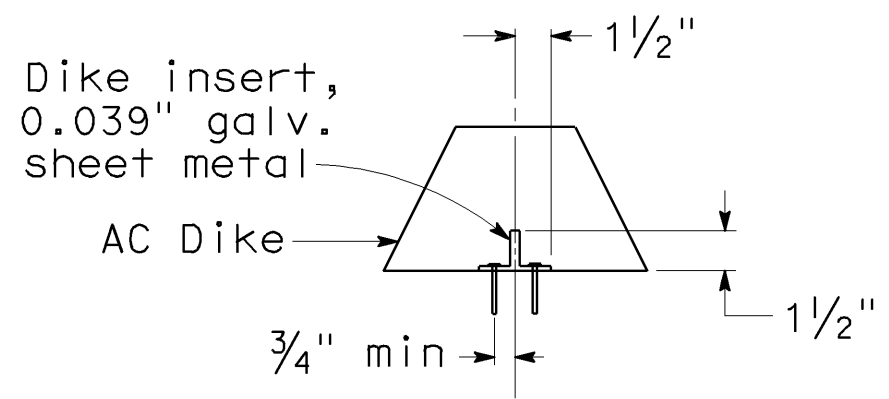

SECTION I-I

1 1/2" = 1'-0"

NOTES:

1. AC Dike and MBGR, if required, are shown for typical application only. For details of this project, see "Road Plans".
2. End angle at beginning of barrier transition, end of wingwall or end of Approach Slab, as applicable.

Remove all polystyrene.